

Sending confirmations of alarm acceptance

In general the *Agent of Control* is considered not to have the same core with the *Server of Control*.

It is possible to configure sending messages to *Agent of Control* when the operator confirms an alarm on the *Server of Control*. The *Agent of Control* then sends these messages to *Intellect* core. Two types of confirmation are available: simple and complex. The confirmation type is selected when configuring alarm transmission to the *Server of Control* (see [Configuring alarm groups](#) section).

When the confirmation is sent, the *Server of Control* waits for the confirmation from the *Agent of Control* that the message has been sent to *Intellect* core. If this message is not received, then confirmation packets are sent every 5 minutes.

Note.

See also [Sample scripts for processing alarm confirmations](#) section.

Disable sending confirmations of alarm acceptance as follows:

1. Go to the settings panel of the *Server of Control* object.
2. Clear the **Transfer info about accepted alarms to Agent of Control** check box.

The screenshot shows the configuration window for a 'Server Of Control' object. The window has a light blue background and contains several sections:

- General:** Object ID '1', Name 'Server Of Control 1', IIDK interface '150', and Event Viewer '>'. The 'Computer' dropdown is set to 'Computer WS2'.
- Logging subsystem:** Includes checkboxes for 'Auxiliary characters' (unchecked), 'Alarm events' (checked), and 'System status' (checked). It also has input fields for 'Archive period (h): 48', 'File size (MB): 100', and 'Keep archives for (months): 3'.
- Transfer:** Includes input fields for 'TCP/IP port (Agent): 7777', 'TCP/IP port (Archive): 7755', 'First COM port number: Com1', 'Number of COM ports: 1', 'COM port speed: 9600', and 'COM port format: 8N1'. A 'Monitoring ...' button is also present.
- Advanced:** Contains a 'Snapshots/video ...' button.
- Bottom Section:** A checkbox labeled 'Transfer info about accepted alarms to Agent Of Control' is checked and highlighted with a red rectangular box. Below it is a 'Restart' button.
- Footer:** 'Apply' and 'Cancel' buttons.

3. Click the **Apply** button.

The **Transfer info about accepted alarms to Agent of Control** function is now disabled.