

# Events escalation in the Operator protocol

When the event is escalated it is removed from the Operator protocol and sent to the Operator protocol set as a superior interface. There are two ways of escalation:

1. Automatically, on the expiry of waiting time for Operator's response.
2. Manually, by clicking the **Escalate** button in the **Current events** tab.

